

EV

**Fast safety solenoid valve
one way - normally closed**

Fast safety solenoid valve one way - normally closed

Type EV

1- Applications

The Delta type EV electrical solenoid valve is a normally closed one-way, direct acting valve. It is designed for use as an interrupter valve or as a shut-off valve in fuel oil burners or manufacturing processes.

The body is fabricated of brass, the plunger is of magnetic quality steel and the seal is a synthetic rubber which is suitable for use with light distillate oils and other fluids that are compatible with the above materials.

2- Technical specifications

Operating oil temperature: 60°C max

Max. operating pressure: 25 Bar

Ambient temperature: 0°C / +60°C

Opening response: Instantaneous cut-off
(open when energized)

Power consumption: 9 W

Protection class: IP65

Flow factor (Kv): 0,08 m³/h

Orifice: Ø2 mm

Weight: 200 g

Fluids: Kerosene, heating oil EL,
Diesel, K1, #1, #2 fuel oil

Connections: G1/8 MF
G1/8 FF
R1/8 M-G1/4 M
FF 1/8" NPTF
MF 1/8" NPTF

3- Materials and construction

Body: Brass

Plunger: Magnetic quality steel

Spring: Stainless steel

Windings: Copper

Seal: FPM

O-ring: NBR


Cord set: PVC

4- Approvals

Recognized by Underwriter's Laboratory
for US and Canada
Standard UL429 - File nr. MH26469



Approved by TÜV for UE
Norms EN 264 and EN ISO 23553-1
Registration nr. 5S102/09

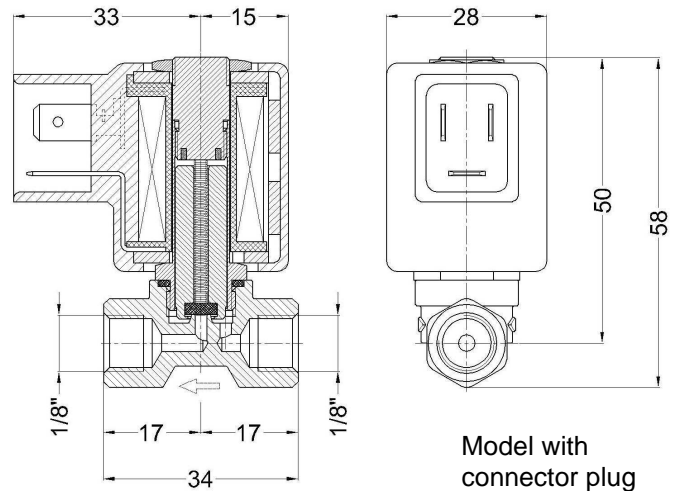

5- Mounting

- Check the direction of flow with the arrow printed on the valve body.
- Check correct alignment of connecting pipes.
- Do not use the valve stem to turn the unit onto the piping.
- Valve may be mounted with coil in horizontal or vertical position. Do not install upside-down.
- By releasing the nut on top of the valve, the coil may be oriented 360 degrees in any direction.
- Install in an area that is protected from rain and water splashes or drops.
- Do not use PTFE tape in the connections.
- An external filter must be always installed upstream the valve.
- Protection against accidental touch of hot coil must be provided by appropriate installation.

⚠ CAUTION

Turn off all power before servicing any part of the system.

6- Maintenance

Coil replacement

- Disconnect power supply of the coil.
- Remove nut on top of valve.
- Replace coil with an identical one.
- Connect the replaced coil and reassemble.

Seal cleaning

- Remove coil as described above.
- Using a 16 mm wrench unscrew the stem.
- Clean seal with clean oil and compressed air.
- Reassemble all the components.

7- Valve identification

EV

8MF

F

B

700

Valve type

Connections

8MF = G1/8 Male-G1/8 Female
 8FF = G1/8 Female-G1/8 Female
 8M4M = R1/8 Male-G1/4 Male
 8FFN = 1/8"Female-1/8"Female NPTF
 8MFN = 1/8"Male-1/8"Female NPTF

Coil type

F = Connector plug
 M = Flexible metal conduit


Supply voltage

A = 230V 50-60Hz (standard)
 B = 110V 50-60Hz
 C = 24V 50-60Hz
 D = 12V DC
 E = 24V DC
 F = 380V 50-60Hz

Cable length L


300 mm	700 mm (standard)
400 mm	1000 mm
500 mm	1600 mm

8- Coil styles

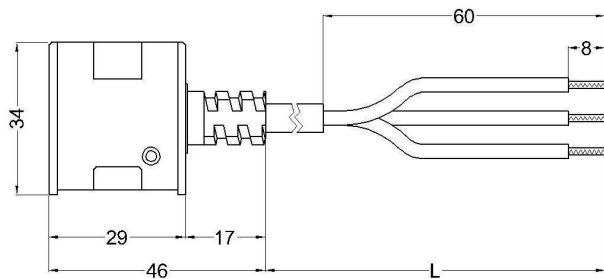

The Delta solenoid valves are available with two different styles of coil.

The M8 style with molded cable¹ offers a fast and efficient method of connection resulting in greatly reduced installation time and cost.

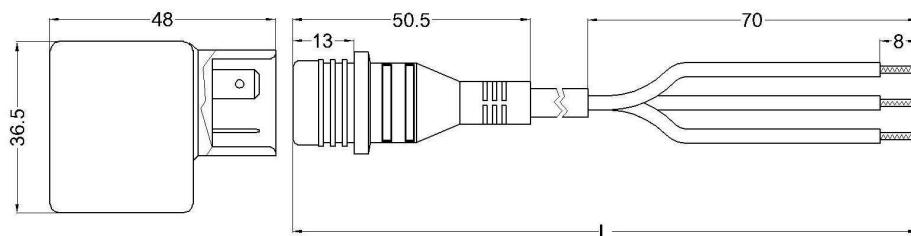

The F84 style with an integral connector plug can easily be plugged directly into a standard electrical supply line connector, simplifying coil replacement.

(1)
 DIN cable: H03VV-F 3x0.75 mm²
 UL cable: 18 AWG 16/30 TC 2/64 PVC 105C 600V VW-1

Elettromeccanica Delta S.p.A.
 31030 Arcade (TV) Italy
 Tel. +39 0422 874068
 Fax. +39 0422 874048
 delta@deltapumps.com
 www.deltapumps.com

We reserves the right to update or make technical changes without prior notice.